


DYNO

Firmware Update Guide V1.7

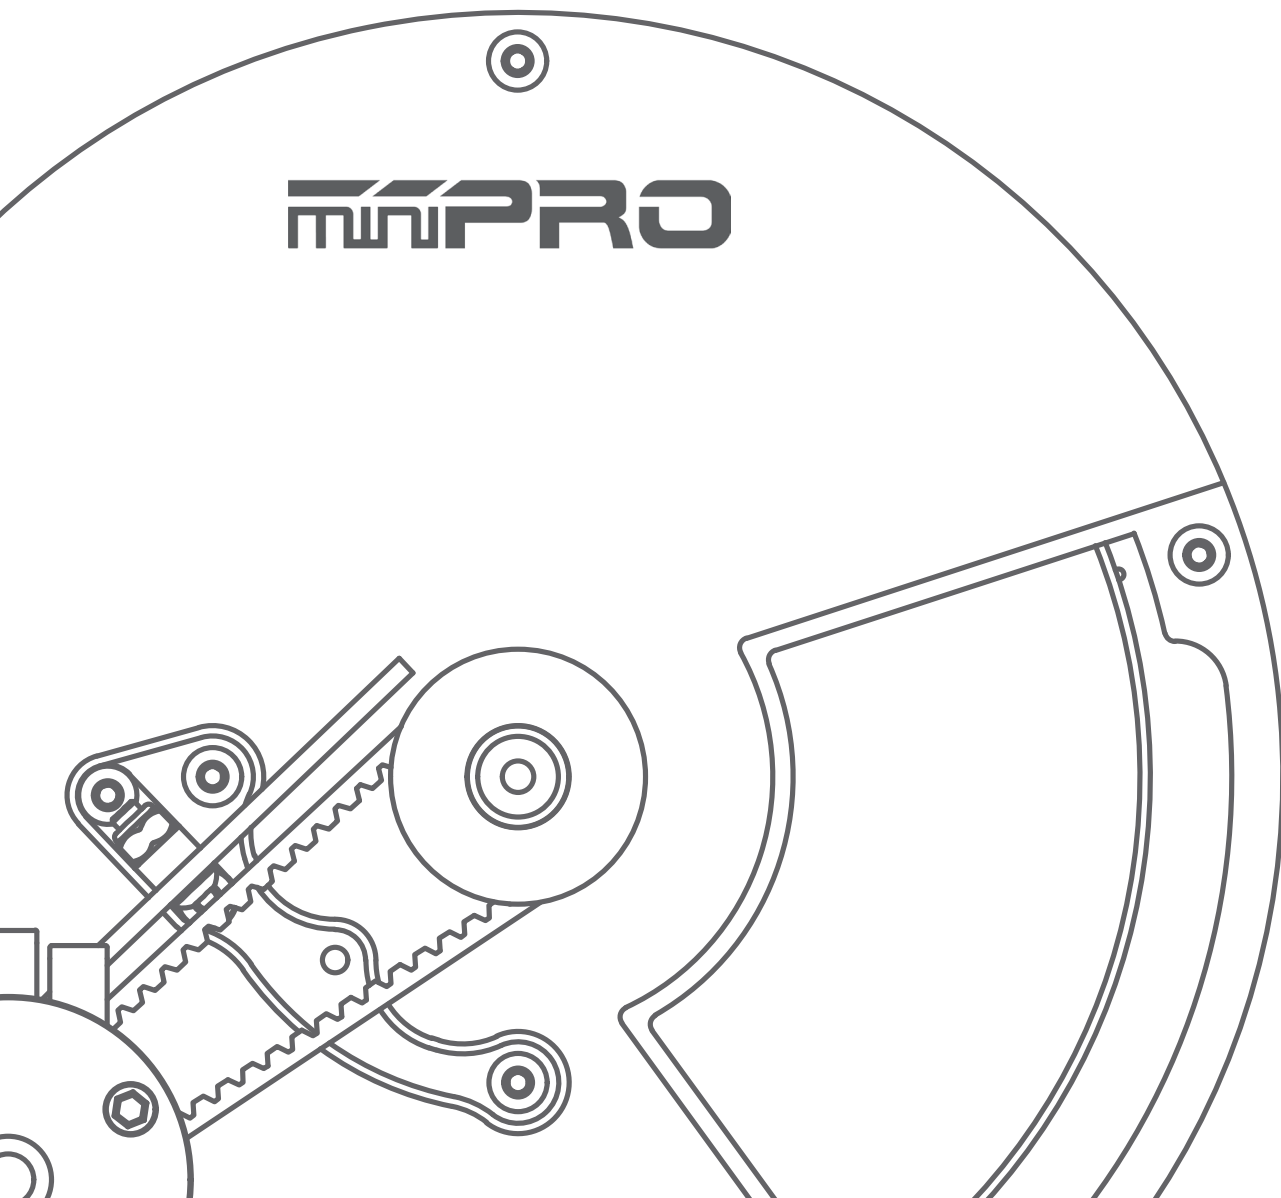

MINIPRO

FIRMWARE UPDATE

What is NEW for Version 1.7?

- Accuracy in Results Increased
- New Units
- New Pulleys Library
- No more pin adjustment for frequency
- Ability to disable sensors


1

Enter Setup Mode



- 1.1. Change *only* Switch #8 to ON.
- 1.2. Press the Reset button on the board.
- 1.3. Open miniPRO Application.
- 1.4. Select "Dyno Settings"

NOTE: Make sure you installed the latest application of miniPRO Dyno before you continue.

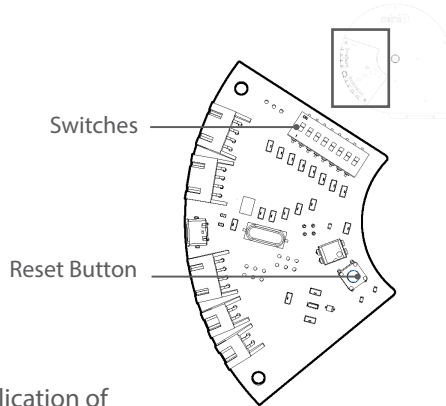

Electronic Board

2

Establish a Connection



NOTE: Make sure *only* Switch #8 is ON.

3

Update the Firmware of your electronic

Update Firmware

- 3.1. Select "Update Firmware."
- 3.2. Locate the latest firmware you like to install.
- 3.3. Select "OK" to continue with the update.
- 3.4. Select "OK" after the update is completed.
- 3.5. A Factory reset must start automatically.
- 3.6. Modify your dyno settings.
- 3.7. Select "Save" to complete your settings.
- 3.8. Select "Disconnect."
- 3.9. Change *only* Switch #8 to OFF, press the reset button and close the application.

4

Perform a Factory Reset

Factory Reset

- 4.1. If the automatically factory reset from step 3.5 worked; then go to step no. 5.
- 4.2. Select "Factory Reset."
- 4.3. Select "OK" to continue.
- 4.4. Select "OK" to after factory reset is completed.
- 4.5. Modify your dyno settings.
- 4.6. Select "Save" to complete your settings.
- 4.7. Select "Disconnect."
- 4.8. Change *only* Switch #8 to OFF, press the reset button and close the application.

NOTE: Make sure *only* Switch #8 is ON; otherwise, the factory reset will not be successful.

5

Done!

If you have any questions, please open a support ticket in support.miniprousa.com.



www.minipro.com

© 2018 miniPRO, LLC. All Rights Reserved.