

MINIPRO® IR SENSOR INSTALLATION

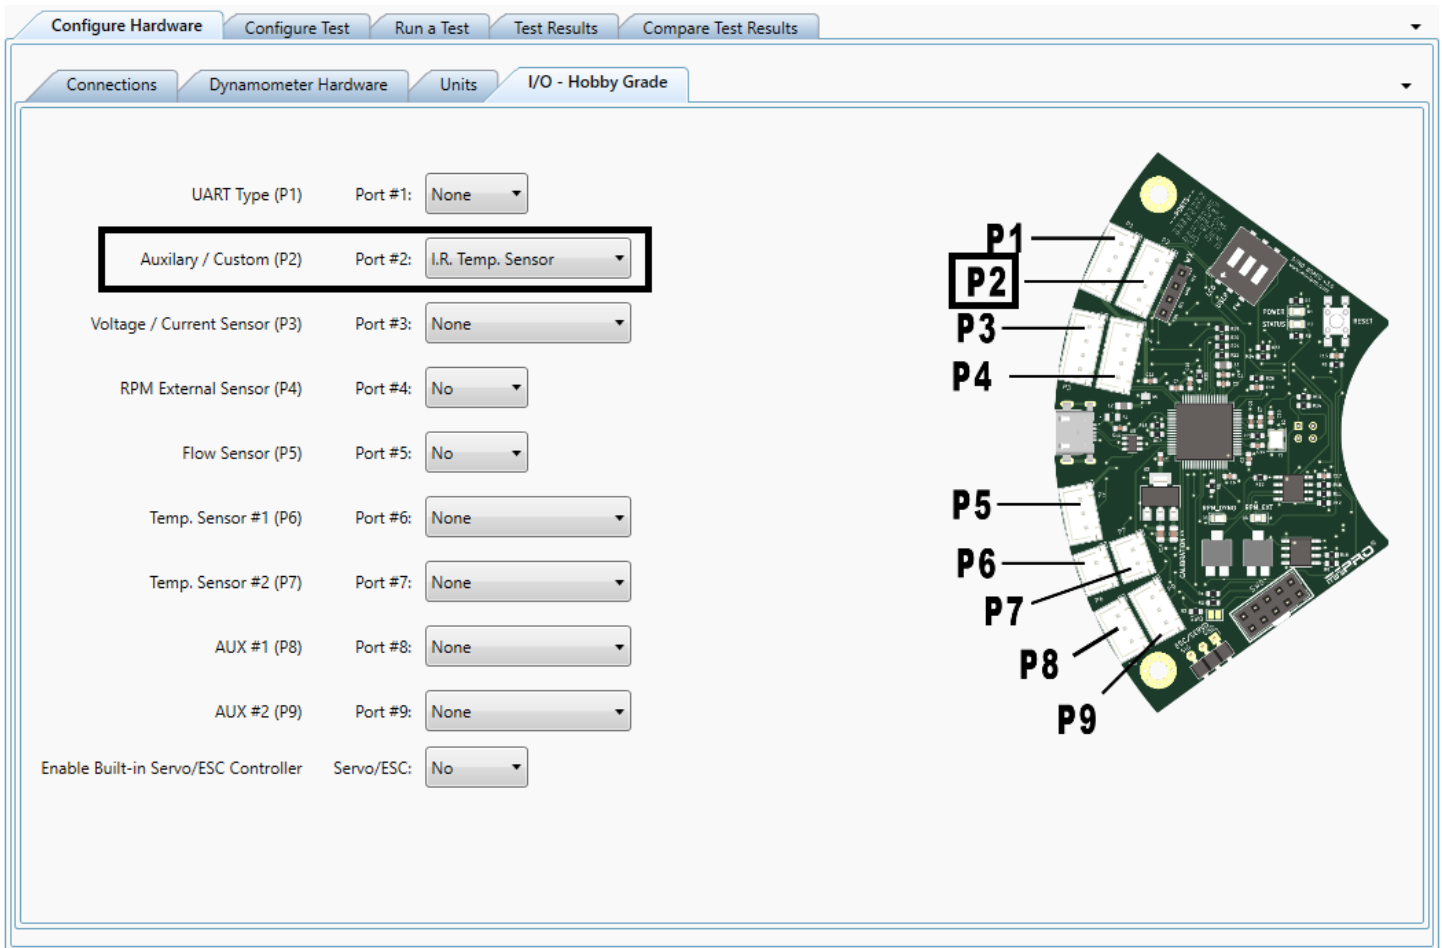


Figure 1: I.R. Sensor Configuration

Instructions:

1. Connect I.R. Sensor to port P2 (see Figure 1).
2. Push the Reset Button and make sure the software is not opened.
3. Open the dyno software and connect the dyno.
4. Go-to I/O – On the “Configure Hardware” tab select “Hobby Grade” tab.
5. Under the Auxiliary/ Custom P2 (Port #2) drop box select “I.R. Temp Sensor.”
6. Go-back to “Dynamometer Hardware” tab and push “Apply Settings” button.
7. Go-to “Run Test” tab and select “Configure Display” tab (below MINIPRO’s logo).
8. Choose desired gauge position and select “Temp #3.”
9. Go-back to “Display” tab and push “Save Setup” button.
10. Done